


ATIS 125.900	Tegel Delivery 121.920	Tegel Ground 121.750	Tegel Tower 124.520	Bremen Radar 119.620 123.220 125.020
-----------------	---------------------------	-------------------------	------------------------	---

Apt. Elev. 122'


RWY	Intersection	TORA (m)	TODA (m)	ASDA (m)
08L		3023	3023	3092
	RW	1973	1973	2042
	TM	1940	1940	2009
	TN	1940	1940	2009
08R		2428	2428	2491
	TS	1896	1896	1939
26L		2428	2488	2476
	RE	1692	1752	1740
26R		3023	3023	3091
	RE	1965	1965	2033

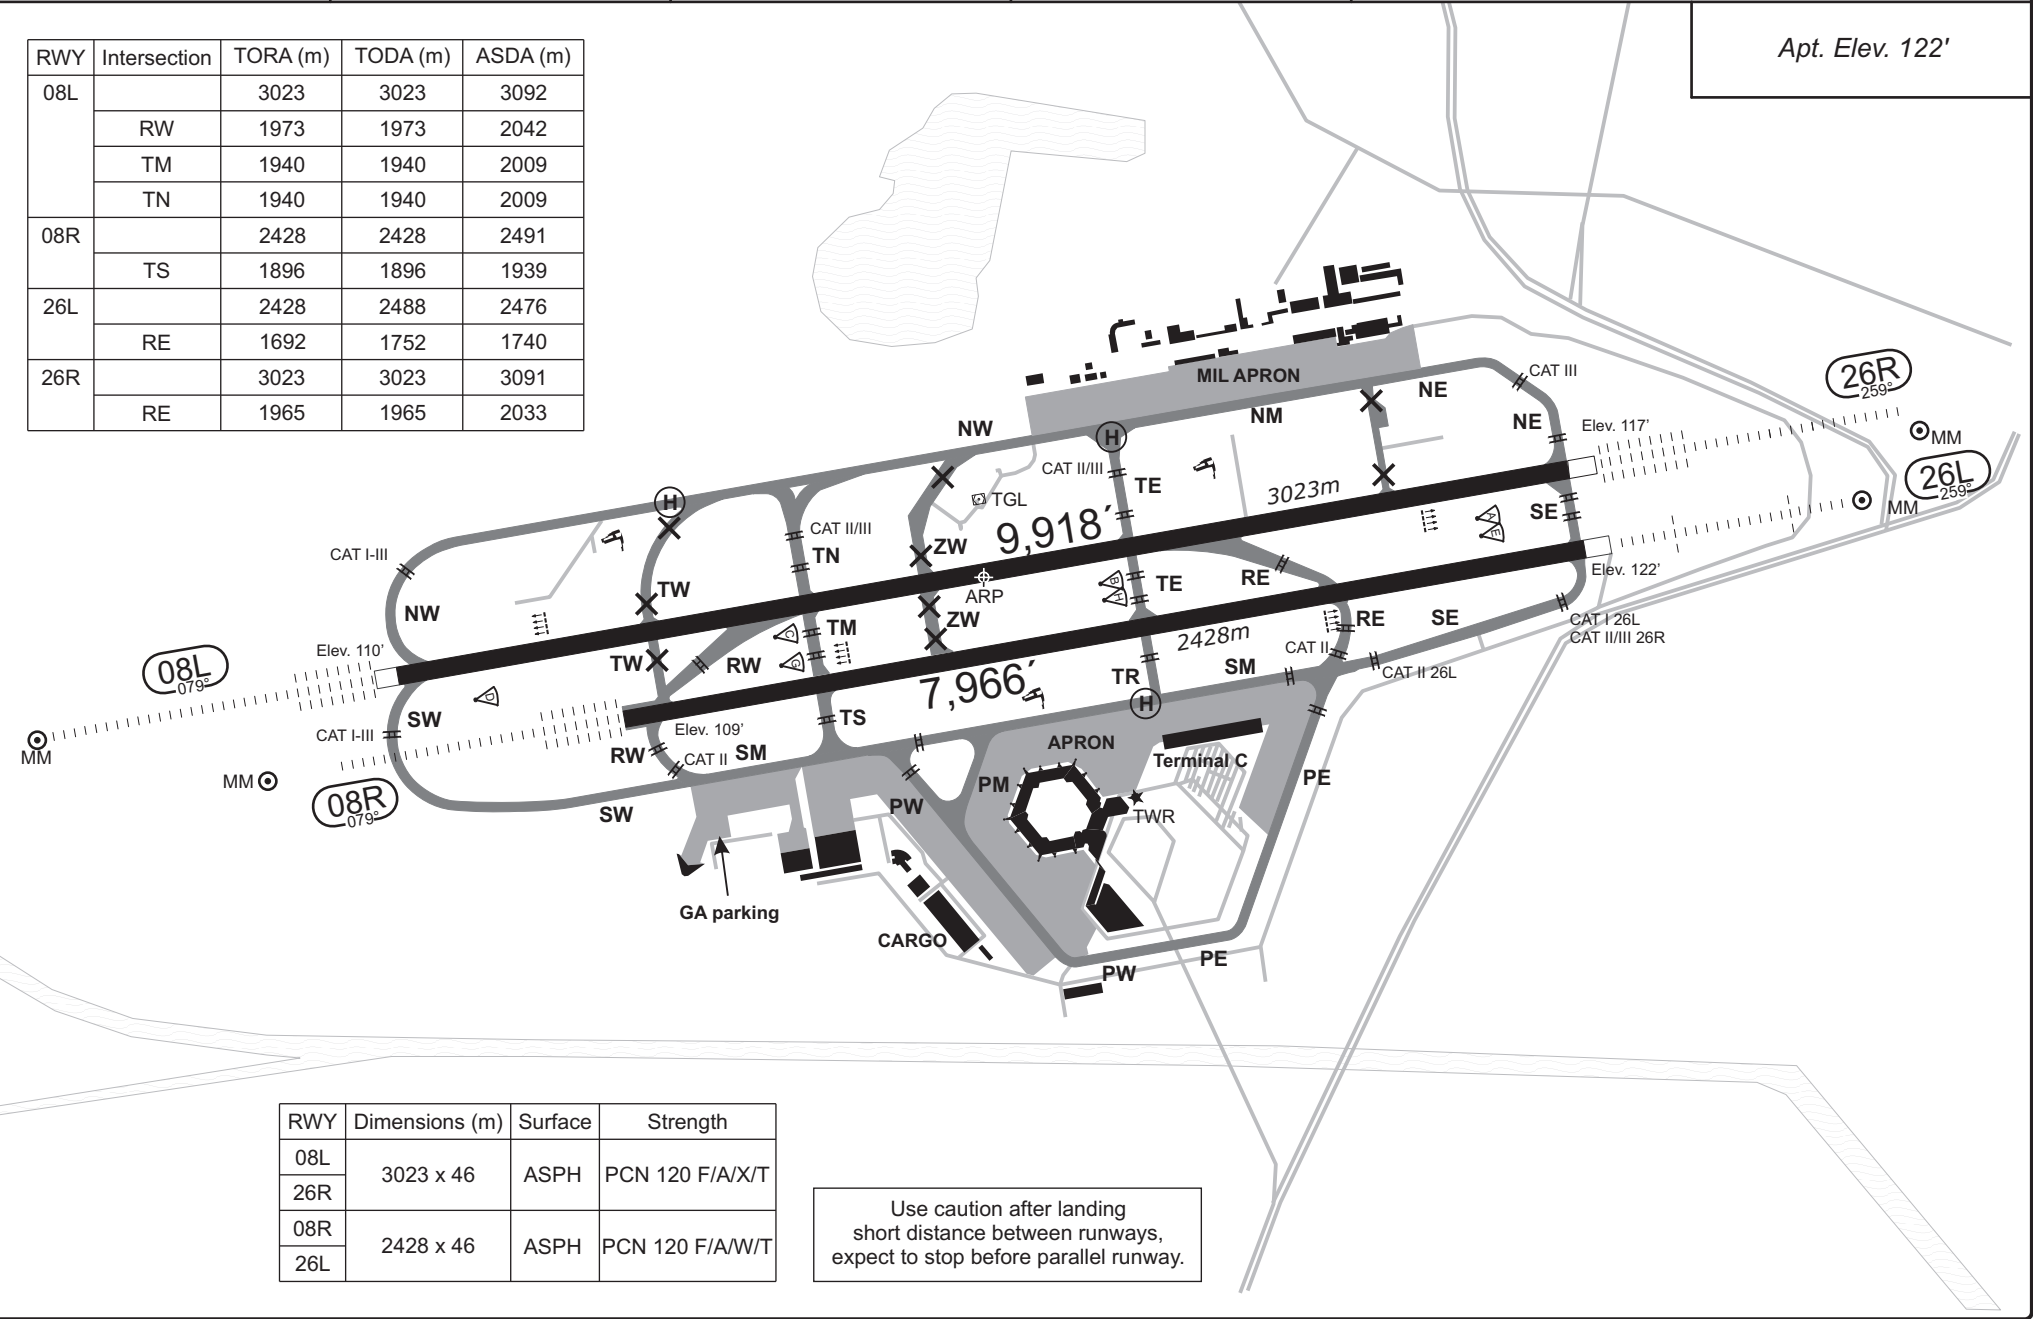

RWY	Dimensions (m)	Surface	Strength
08L	3023 x 46	ASPH	PCN 120 F/A/X/T
26R			
08R	2428 x 46	ASPH	PCN 120 F/A/W/T
26L			

Use caution after landing short distance between runways, expect to stop before parallel runway.

**Valid for flight simulation use only - do not use for real life navigation**

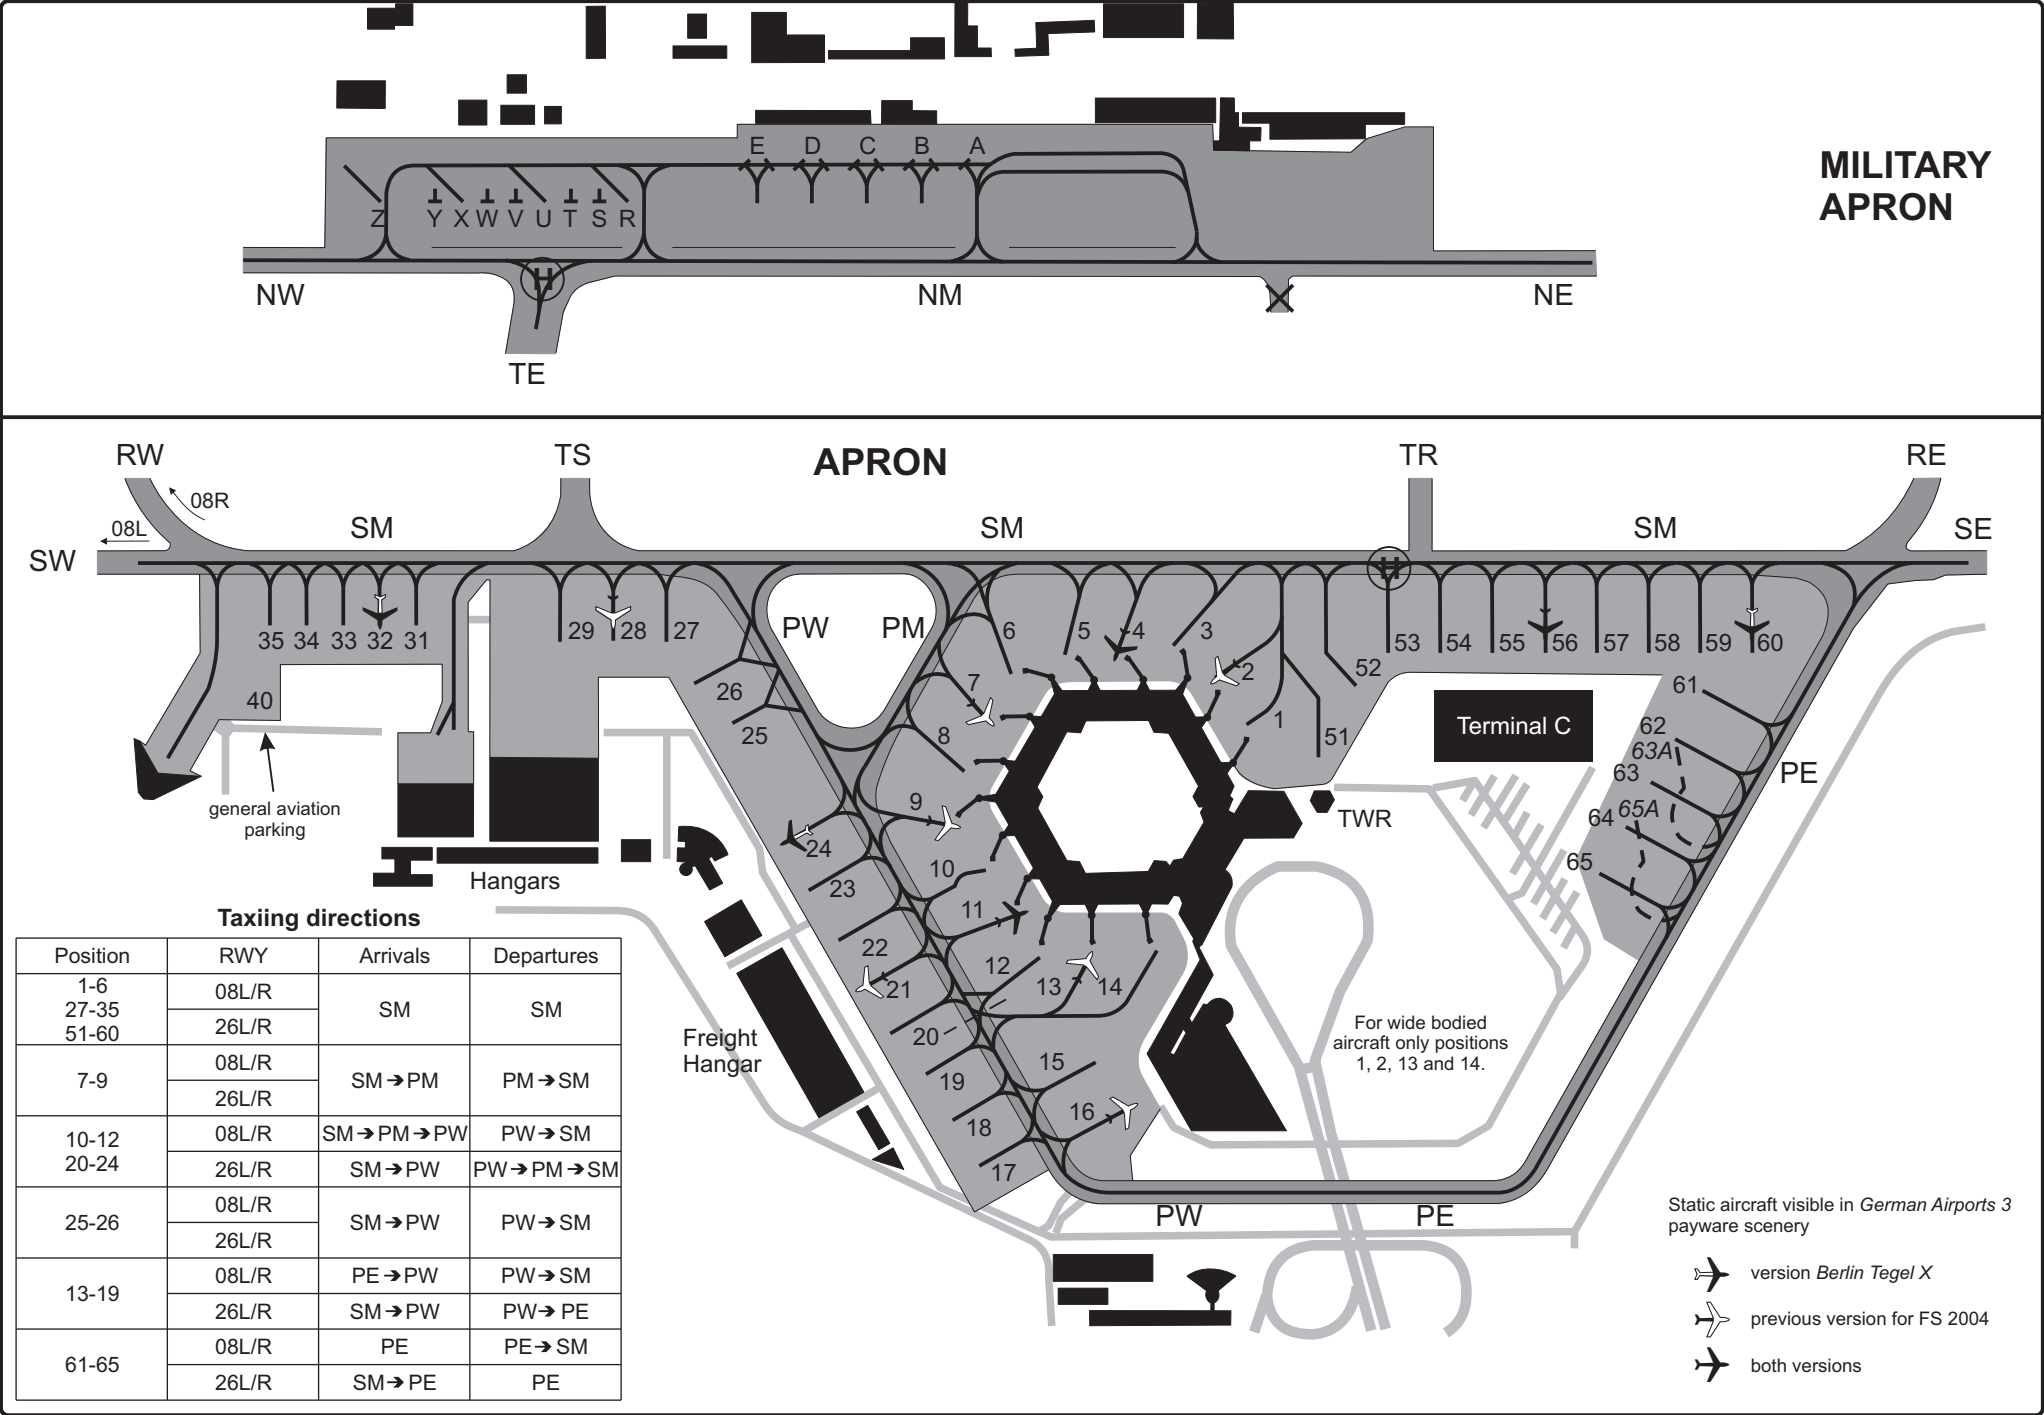

**MILITARY APRON**

**APRON**

**Terminal C**

For wide bodied aircraft only positions 1, 2, 13 and 14.

**Taxiing directions**

Position	RWY	Arrivals	Departures
1-6 27-35 51-60	08L/R 26L/R	SM	SM
7-9	08L/R 26L/R	SM → PM	PM → SM
10-12 20-24	08L/R 26L/R	SM → PM → PW	PW → SM
25-26	08L/R 26L/R	SM → PW	PW → SM
13-19	08L/R 26L/R	PE → PW	PW → SM
61-65	08L/R	SM → PW	PW → PE
	26L/R	SM → PE	PE → SM

Static aircraft visible in German Airports 3 payware scenery

- version Berlin Tegel X
- previous version for FS 2004
- both versions

**Valid for flight simulation use only - do not use for real life navigation**