

VATSIM Germany
Standard Instrument Arrival Chart
Frankfurt-Hahn
EDFH
STAR
RWY 03/21

Designator	Identification Significant Points	MAG Track (TRUE)	Dist NM	MNM IFR Cruising Level (*Operational Level)	Remarks
I EMGOD 1R	EMGOD ONE ROMEO Δ EMGOD Δ Hahn NDB			6000	
		187	14		
I NOR 2R	NÖRVENICH TWO ROMEO Δ Nörvenich VORTAC Δ Hahn NDB				
		156	57		
I OLGIL 1R	OLGIL ONE ROMEO Δ OLGIL Δ Hahn NDB				
		265	18		
I OLIVI 1R	OLIVI ONE ROMEO Δ OLIVI Δ Hahn NDB				
		311	17		
I ROPUV 1R	ROPUV ONE ROMEO Δ ROPUV Δ Hahn NDB				
		132	23		


VATSIM Germany Standard Instrument Arrival Chart

Frankfurt-Hahn
EDFH
STAR
RWY 03/21

Transition Altitude: 5000 ft.

ATIS 120.900
Ground 121.970
Tower 119.650
Langen Radar 125.600

VAR: 1° E

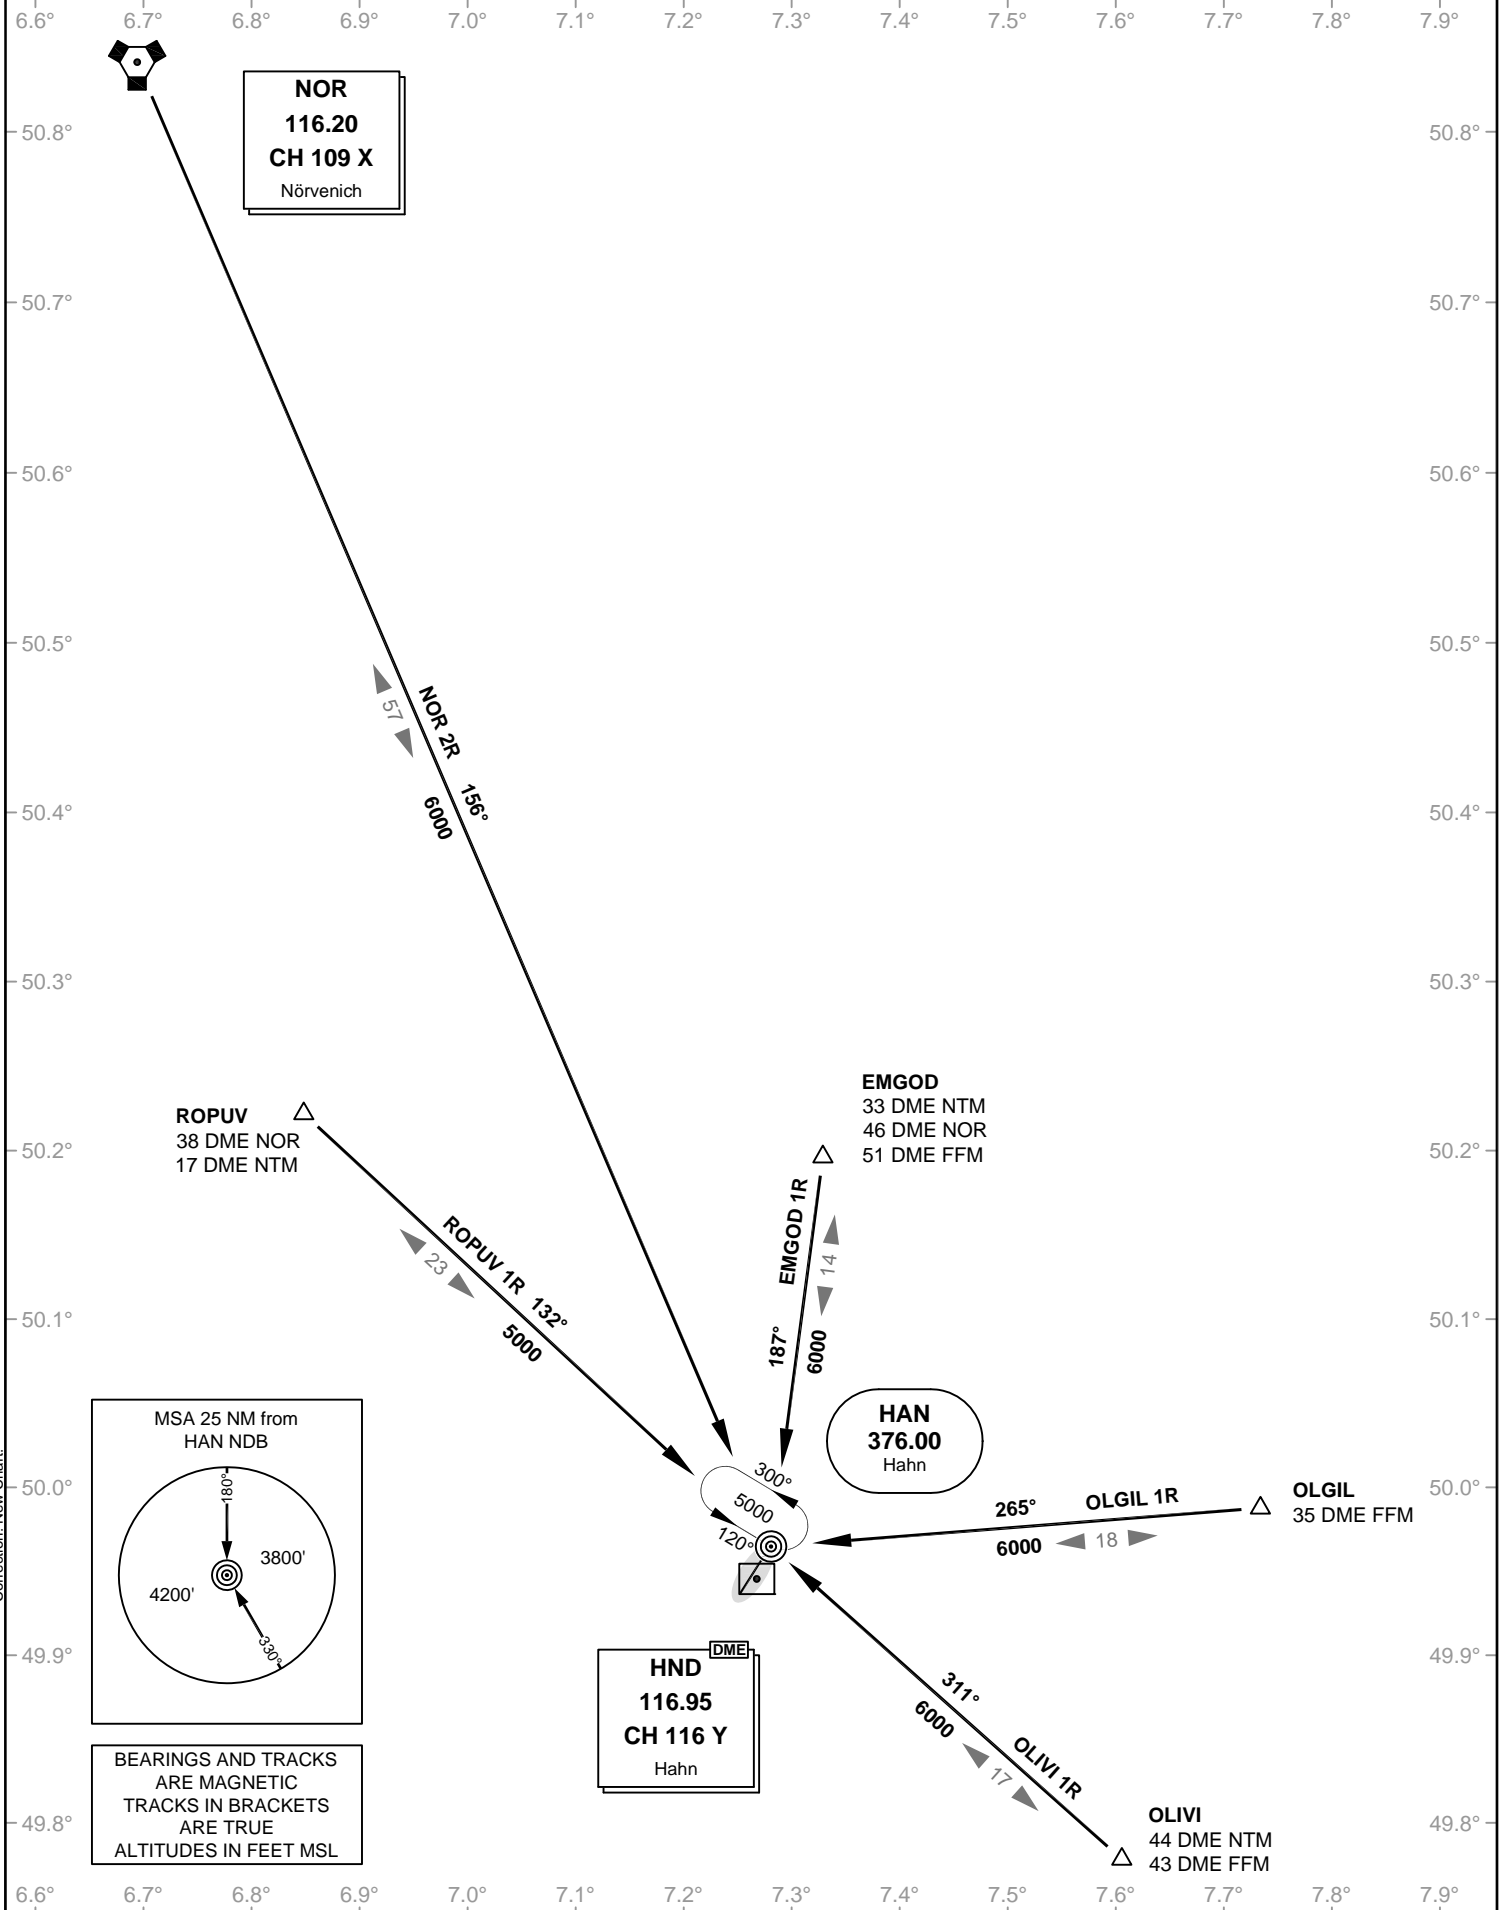

Correction: New Chart.