

VATSIM Germany GPS / FMS RNAV ARRIVAL CHART

Hamburg
EDDH

Transition Altitude: 5000 ft.
 ATIS 124.320
 Bremen Radar 127.670
 134.250
 Director 118.200
 Tower 126.850


Transition to Final Approach
RWY 05

REMARK


1. Use of transitions only when cleared by ATC.
2. On downwind expect vectors to final.
3. Speed restrictions on transition (even without profile) are always mandatory, unless cancelled by ATC.

HAM
 113.10
 CH 78 X
 Hamburg

LBV
 115.10
 CH 98 X
 Elbe

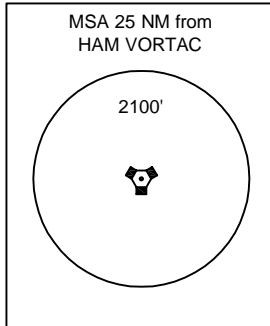

BEARINGS AND TRACKS
 ARE MAGNETIC
 TRACKS IN BRACKETS
 ARE TRUE
 ALTITUDES IN FEET MSL

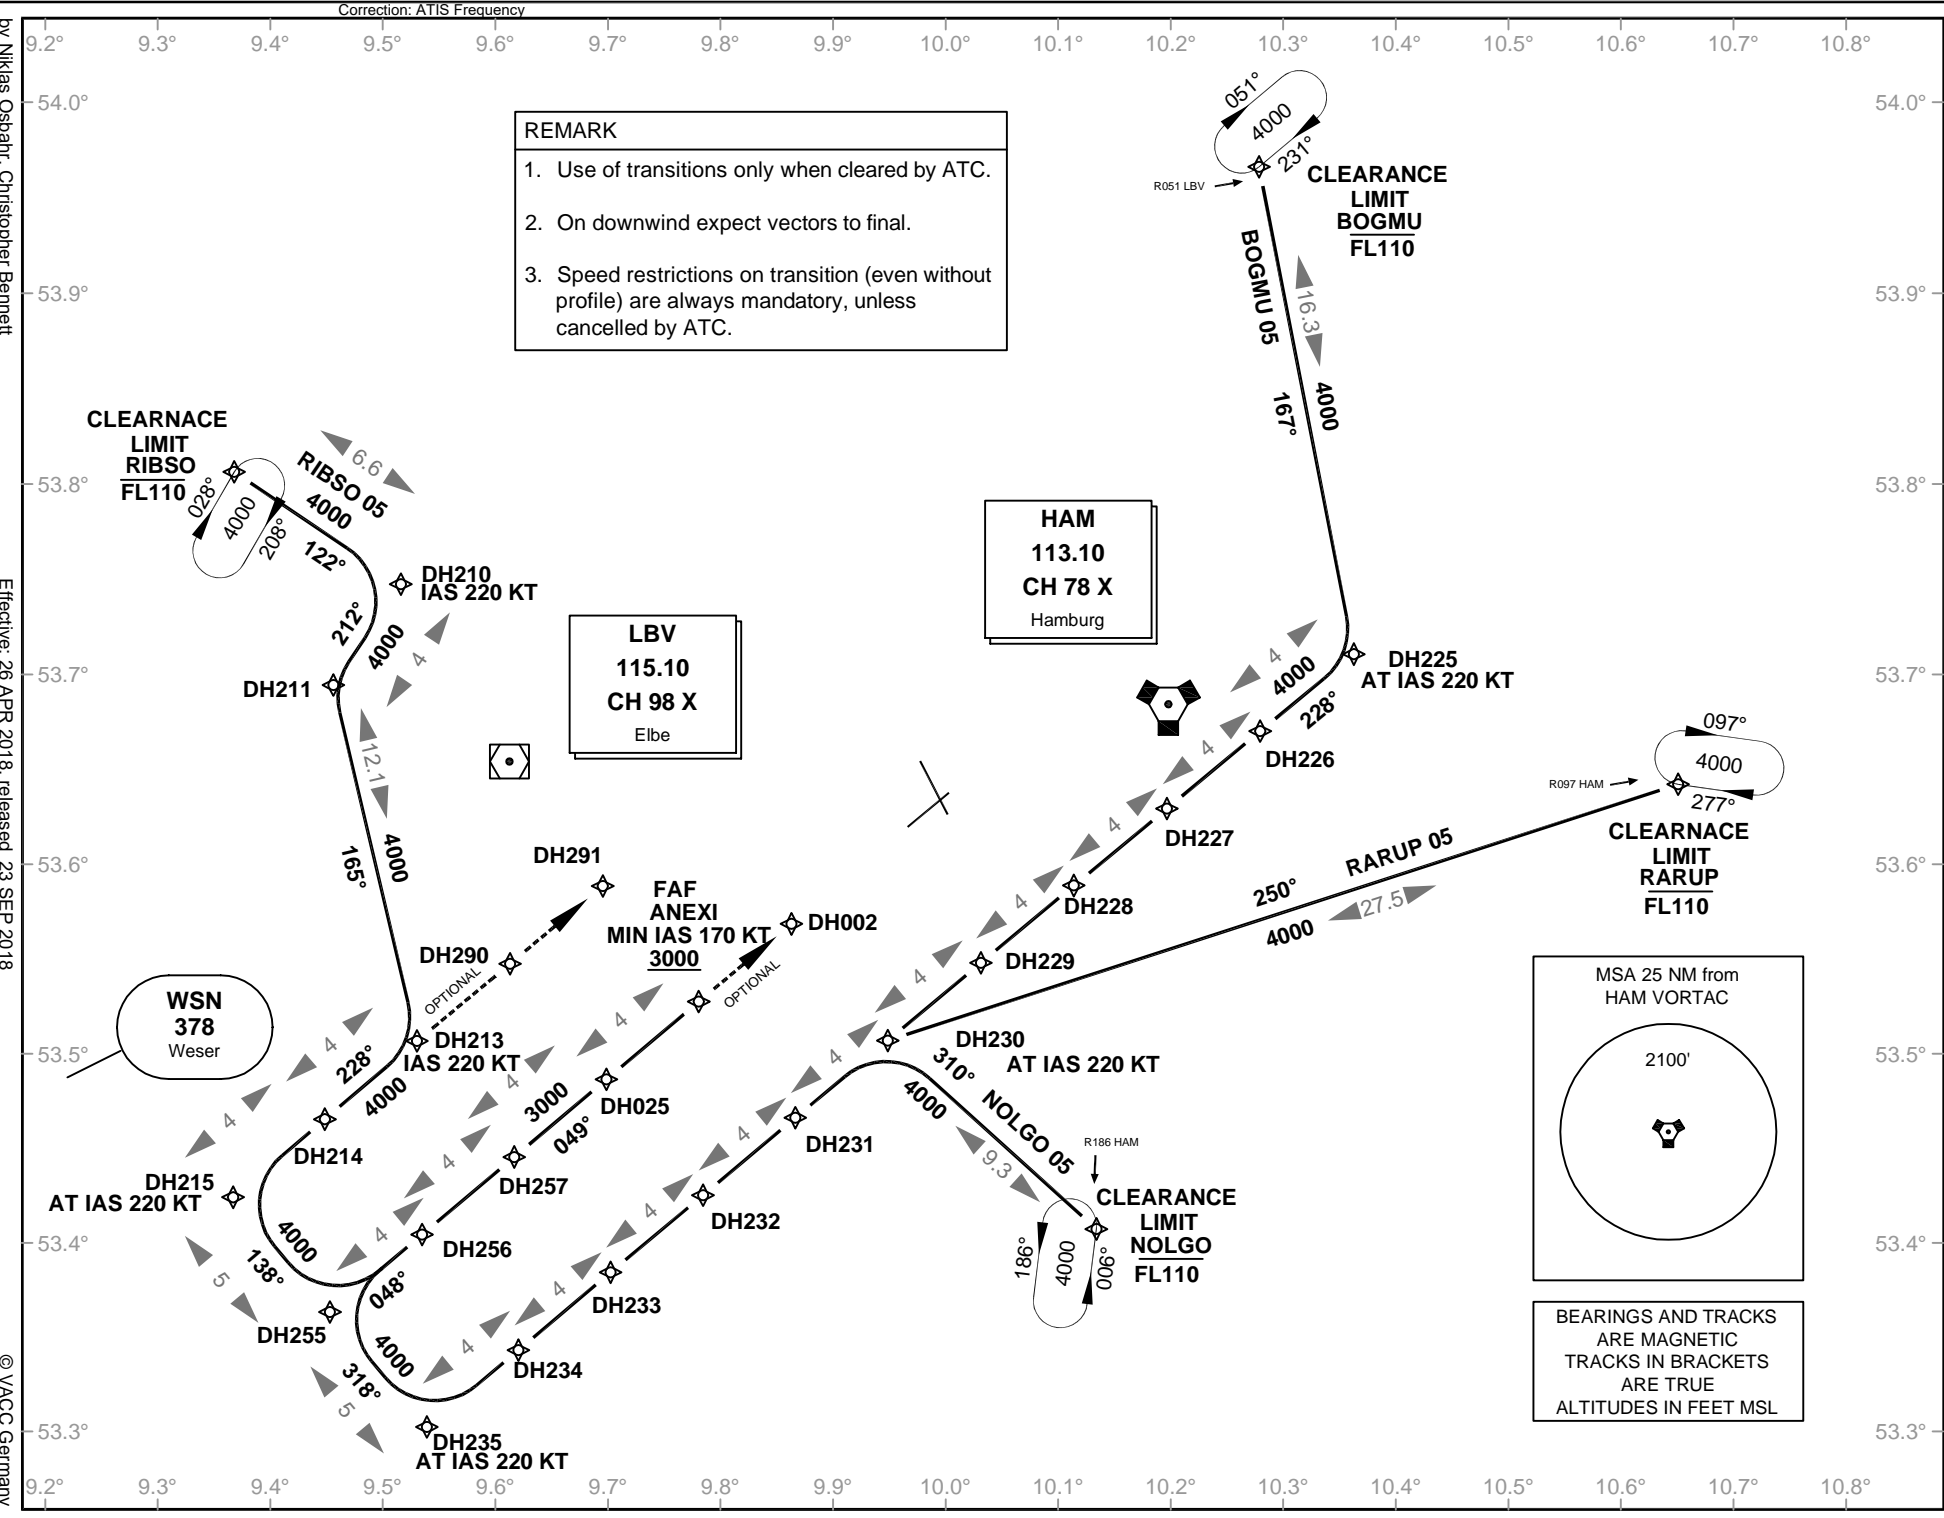

by Niklas Osbahr, Christopher Bennett
 Effective: 26 APR 2018, released 23 SEP 2018
 © VAAC Germany

For flight simulator use only. Not to be used for real world flight.