

VATSIM Germany GPS / FMS RNAV ARRIVAL CHART


Hamburg
EDDH

Transition Altitude: 5000 ft.
ATIS 124.320
Bremen Radar 127.670
134.250

Director 118.200
Tower 126.850

Transition to Final Approach
RWY 15

- REMARK
1. Use of transitions only when cleared by ATC.
 2. On downwind expect vectors to final.
 3. Speed restrictions on transition (even without profile) are always mandatory, unless cancelled by ATC.

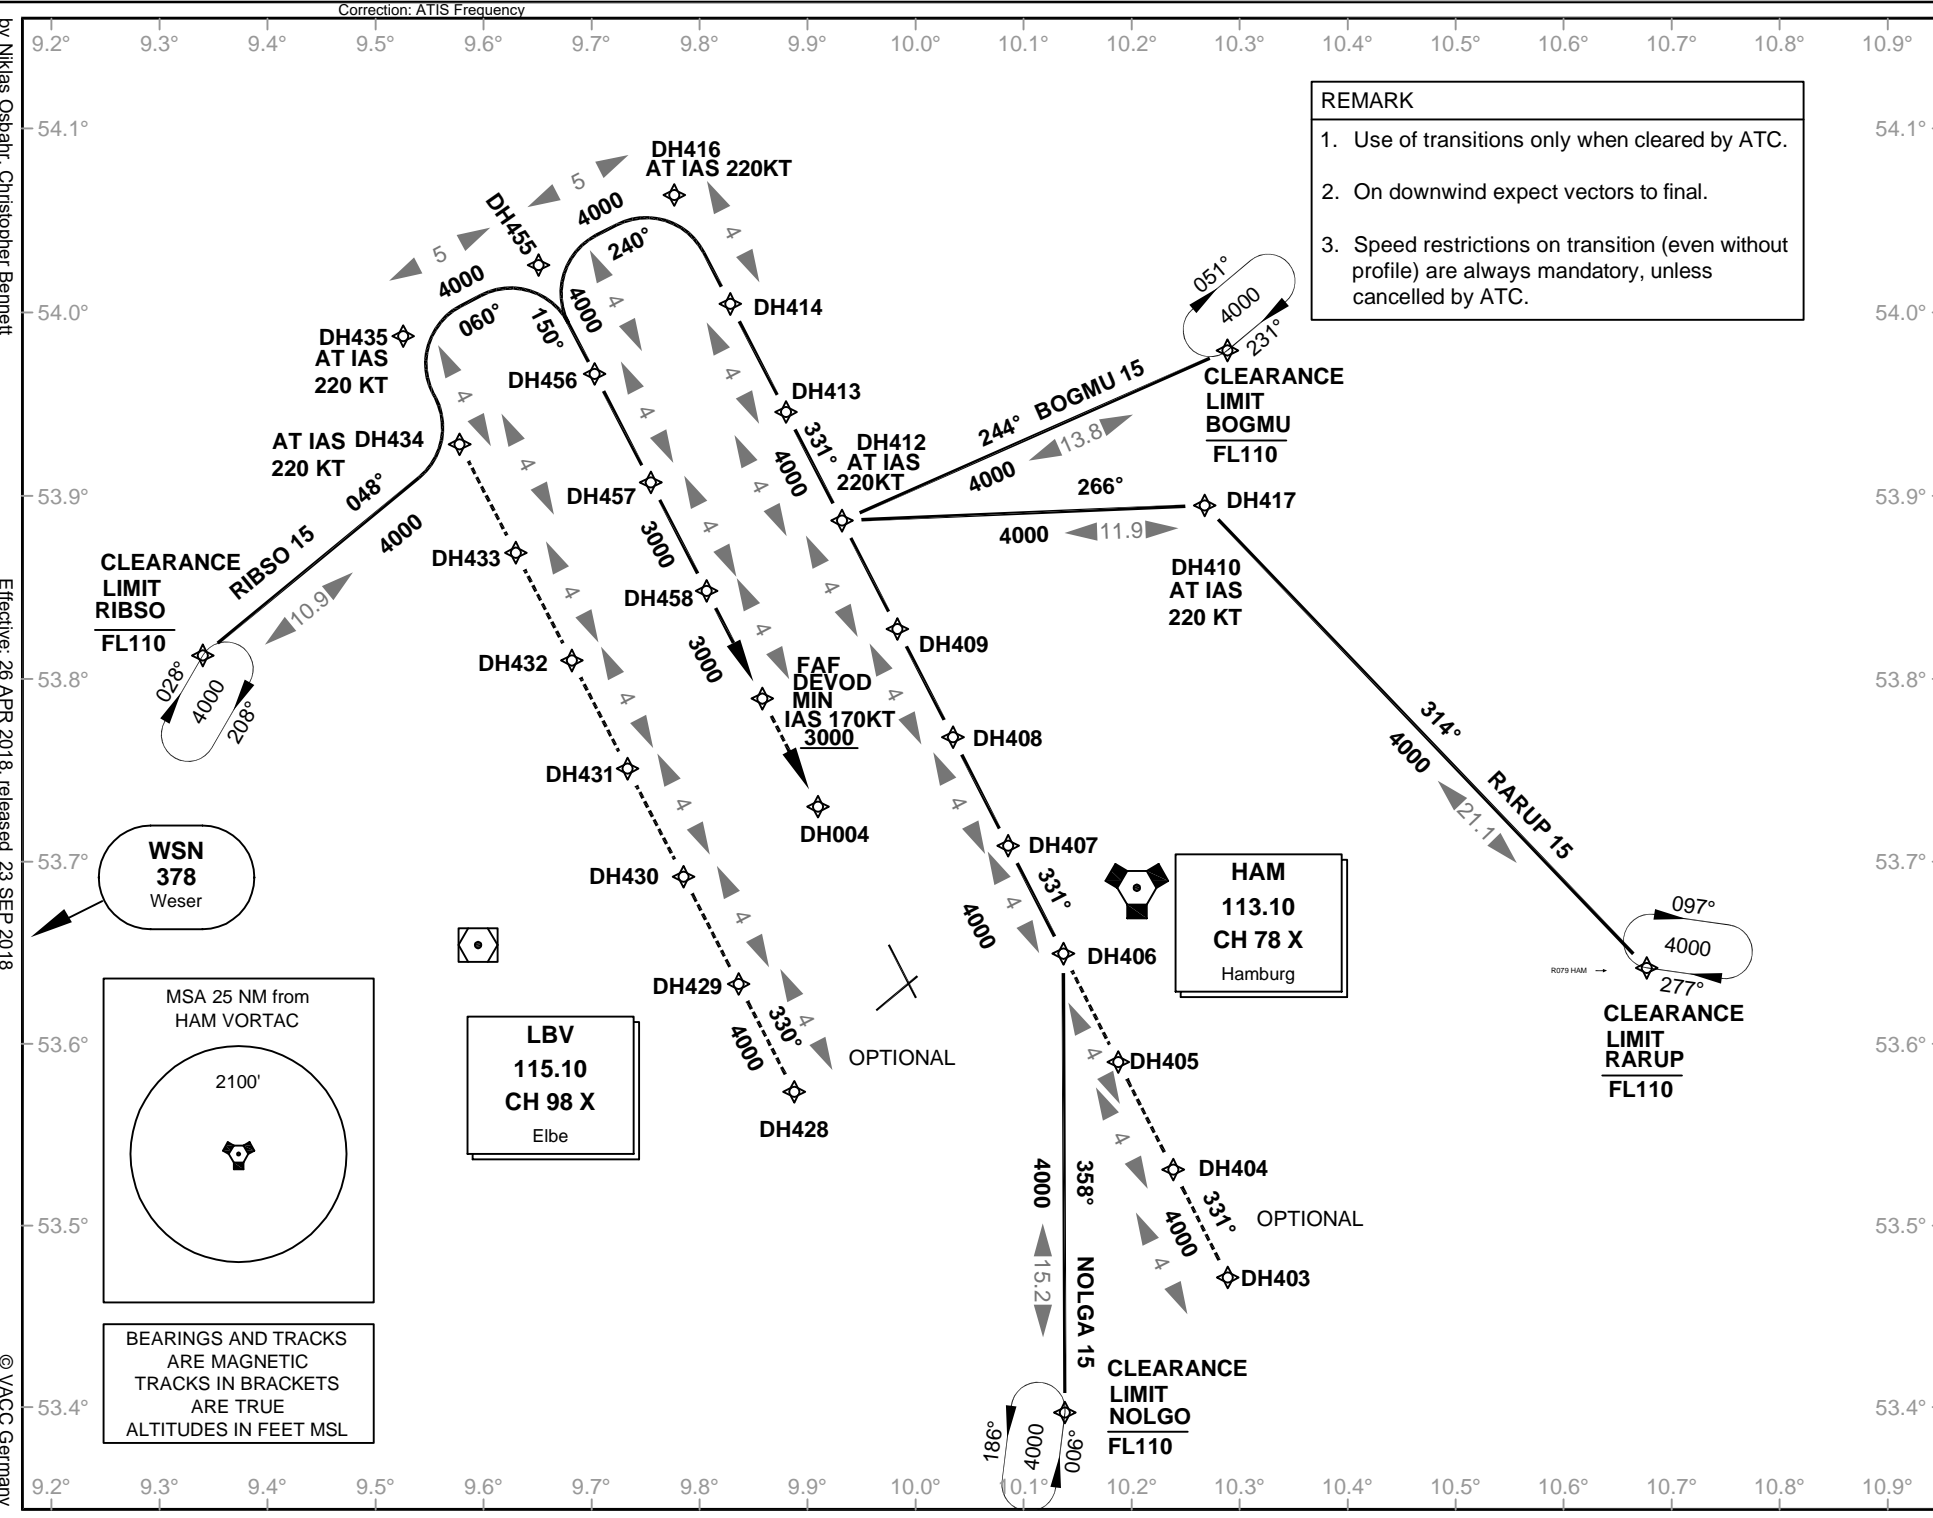

by Niklas Osbahr, Christopher Bennett
Effective: 26 APR 2018, released 23 SEP 2018
© VACC Germany

For flight simulator use only. Not to be used for real world flight.