

VATSIM Germany GPS / FMS RNAV ARRIVAL CHART

**Bremen
EDDW**



Transition Altitude: 5000 ft.
ATIS 132.370

VAR: 2° E
Bremen Radar 124.800

Director 124.800
Tower 120.320
Ground 121.750

**Transition to Final Approach
RWY 09**

- REMARK
1. Use of transitions only when cleared by ATC.
 2. On downwind expect vectors to final.
 3. Speed restrictions on transition (even without profile) are always mandatory, unless cancelled by ATC.
 4. Altitude assignments will be issued by ATC.

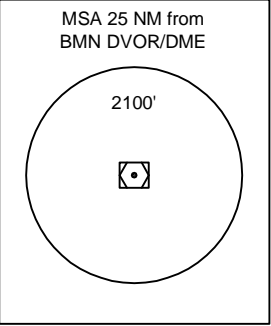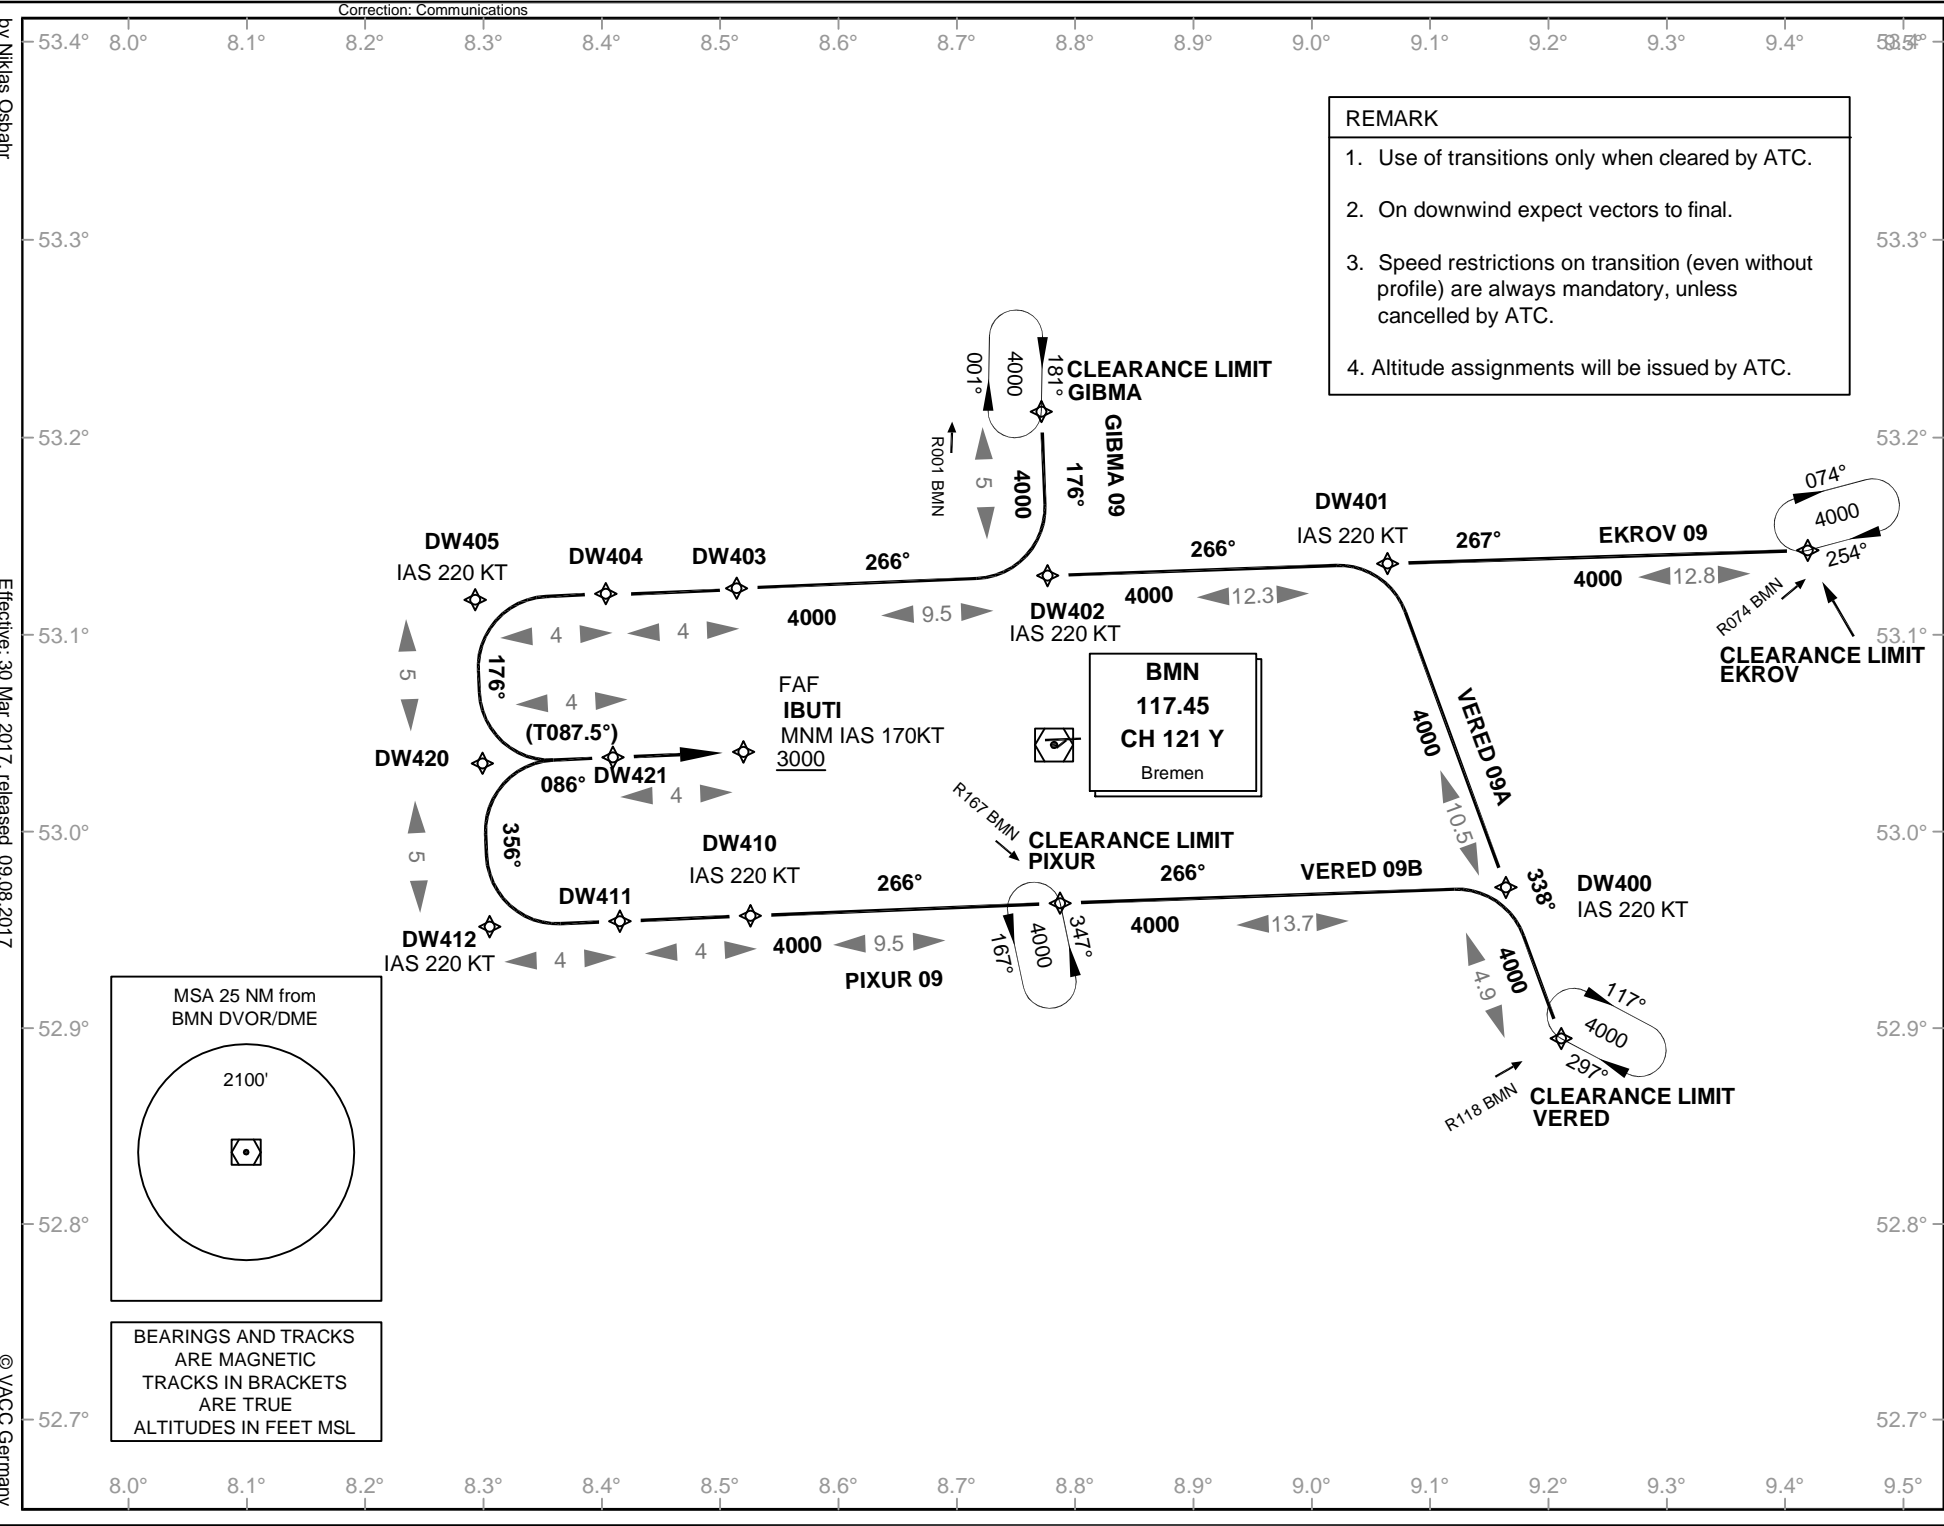

BEARINGS AND TRACKS
ARE MAGNETIC
TRACKS IN BRACKETS
ARE TRUE
ALTITUDES IN FEET MSL